



Office:

Rm 4409, No. 372,
Huanshi Dong Road,
Yuxiu District,
Guangzhou, 510060,
China



Website:

www.pydlife.com



Mob/WhatsApp:

+86 19924795321



E-mail:

sales01@pydlife.com



Mini Craft Express Heat Press

CEHP0203-LBN

USER MANUAL



 


SAFETY INSTRUCTIONS

To avoid injury or death caused by electric shock, please read all the instructions before using the machine.

1. Keep the machine unplugged when moving it;
2. Keep the machine unplugged when installing accessories;
3. Use the machine on a flat and stable table in a ventilated room;
4. Wear heat-resistant gloves when using the machine;
5. Do not use the machine in a hazardous place;
6. Do not use the machine when it can't function properly;
7. Do not disassemble and reassemble the machine without special guidance;
8. Do not plug the machine in unsuitable AC outlet;
9. Do not touch the heating platen when the machine is heating up;
10. This machine is not intended for use by people (including children) who lack of physical or sensory capability, experience and knowledge, unless they have been given supervision and guidance by a person responsible for their safety;
11. Children should use the machine under the supervision of adults responsible for their safety;

PRODUCT STRUCTURE

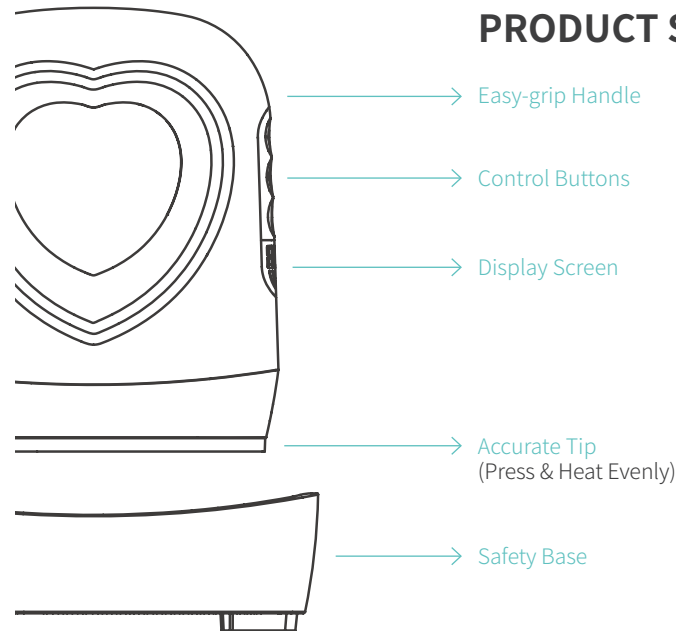

SPECIFICATION

| Model | Rated Voltage | Rated Frequency | Rated Power |
|---------------------|---------------------|-----------------|-------------|
| CEHP0203-LBN-220 | 220V | 50hz | 300w |
| CEHP0203-LBN-110 | 120V | 60hz | 150w |
| Max. Printable Area | 3.5*2.3in (9*5.8cm) | | |
| Material | Plastic / Alloy | | |

Printing Parameter



Vinyl Film

Time: 65 seconds
Temp.: 165°C / 329 °F



Sublimation Paper

Time: 30 seconds
Temp.: 210°C / 410 °F

 
The parameters above are for reference only, please adjust the settings according to your own products.

POWER ON / OFF



Long press for 3 seconds to power on.
Long press for 3 seconds to power off.

1. Press once to start countdown.
2. Press once again to stop countdown.

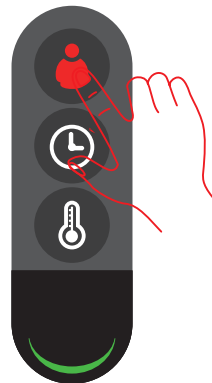

TIME SETTING (SIMPLE MODE)



IN SIMPLE MODE

In simple mode, the time range is **10-120** seconds and the values are fixed. You can only adjust up or down by **5** seconds.

PROMPT

1. Press time button to enter time setting;
2. Now the time button can be used as “+” button, and the temp. button can be used as “-” button. Press the two buttons to adjust time;
3. The value will blink for four times and be set automatically.

 


TIME SETTING (ADVANCED MODE)



In advanced mode, the time range is **10-999** seconds. You can set any value.

1. To enter advanced time setting, long press the time button for 5 seconds when the machine is off, and the screen will display “OFF” ;
2. Turn on the machine, press time button to enter time setting, set the time according to the steps on the previous page;
3. To switch to simple mode, turn off the machine, long press the time button for 5 seconds until the screen display “ON” .

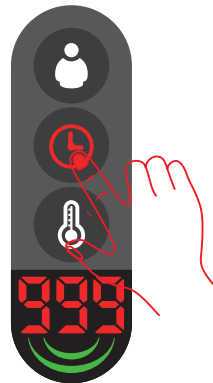


TEMP. SETTING (SIMPLE MODE)



In simple mode, there are four levels of temperature options to choose from.

 - Level 1: 140°C (284 °F)
- Level 2: 165°C (329 °F)
- Level 3: 185°C (365 °F)
- Level 4: 210°C (410 °F)

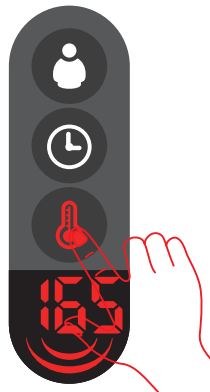


1. Press temp. button to enter temp. setting;
2. Now the time button can be used as “+” button, and the temp. button can be used as “-” button. Press the two buttons to adjust temperature;
3. The value will blink for four times and be set automatically.

TEMP. SETTING (ADVANCED MODE)




In advanced mode, the temp. range is 60-210°C (140-410 °F). You can set any value.

 1. To enter advanced temp. setting, long press the temp. button for 5 seconds when the machine is off, and the screen will display “OFF” ;
2. Turn on the machine, press temp. button to enter time setting, set the temperature according to the steps on the previous page;
3. To switch to simple mode, turn off the machine, long press the temp. button for 5 seconds until the screen display “ON” .

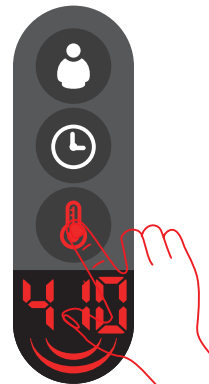

SWITCH TEMP. UNIT

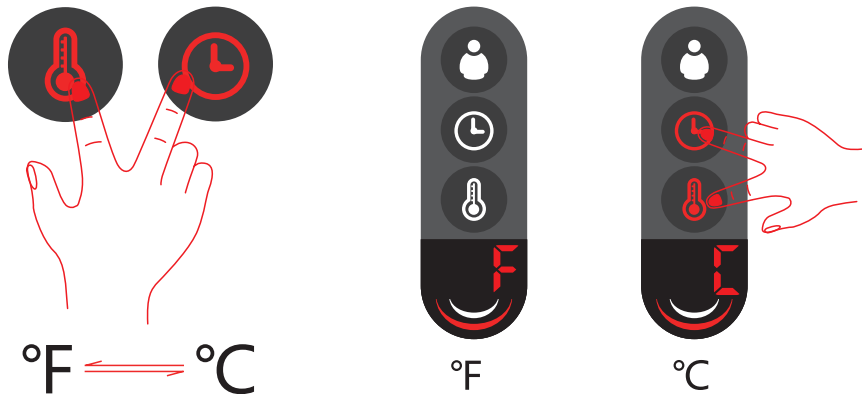 

1. Turn off the machine;
2. Long press the time and the temp. buttons together for 3 seconds to switch between °C and °F .

PLACEMENT & STORAGE

 
PLACEMENT

After printing, the machine will remain at a high temperature. Please put it back on the safety base and do not touch its bottom.

- A. Mini Craft Express Heat Press
- B. Safety Base

STORAGE

1. Turn off and unplug the machine, wait until it cools down completely;
2. Put it into the original box, and store it in a dry and cool place.

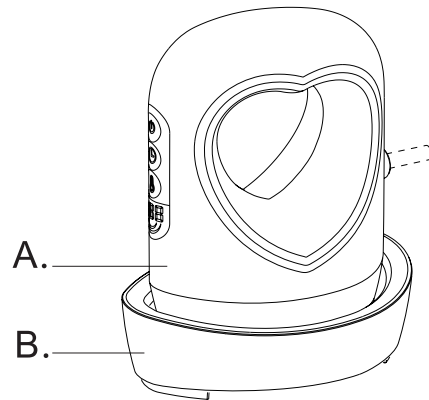

Be careful! Avoid direct touch on heat platen!