

PYD Life
**PORTABLE
 COLOR PRINTER**



**Print your design
 Color your life**

WHAT'S IN THE BOX

- | | |
|---------------------------|-----------------------------|
| 1. Portable Color Printer | 5. Advanced Printing Module |
| 2. Base Dock | 6. Two Batteries |
| 3. Case Bases | 7. Type-C Charging Cable |
| 4. Standard Ink Cartridge | 8. Manual |

INSTALL CARTRIDGE

- Remove the protective case and protective film on the ink cartridge.
- Remove the printer base and pull the toggle switch to "OFF", then open the transparent cover.
- Put the ink cartridge into the printer's ink slots, making sure that it's fully secured. Close the transparent cover and pull the toggle switch to "ON".

Notes:

- To open and lock the cover, keep the cover in the closed position and then toggle the switch.
- If the ink cartridge is not used for a long time, it is recommended to put it back in the cartridge protective case.

OPEN APP

Turn on the power switch on the bottom of the printer and wait for 5 seconds to get ready to go with a beep.

Connect through WiFi

- Search for Wi-Fi with your device (such as a mobile phone). Find "PYD Printer" and connect. (Default password: 11111111)
- Use the camera app to scan the QR code on the inner side of the base or enter the address 192.168.1.1 in your browser to open the app.

Connect through USB

- Connect the USB cable to your device (such as a laptop).
- Use the provided base, and driver is required for Windows, and the driver is not required for Mac OS.
- Enter the address 192.168.1.1 in your browser to open the app.

Notes:

- The address is only accessible when WiFi or USB is connected to the printer network.
- If the Android system cannot access the address normally, please turn off the system network's auto-connect function, and restart the printer. Then, re-connect to the multi-network of using the mobile network.
- Please use the QR code scanning tool that does not rely on the Internet, or enter the address manually.
- This will be supported on Chrome, Safari and Firefox.

PRINT OPERATION

- Turn on the power switch on the bottom of the printer and wait for 5 seconds to get ready to go with a beep.
- Place the printer on the flat paper and press the button for 3 seconds to automatically clean the nozzle. It may take several times to ensure that the nozzle is opened and the print.
- Place the paper on the surface or the edge to be printed.
- Click the button, the green indicator light is on, and it's ready to print.
- Slide the printer to the right to complete the print operation. The green light goes off when it's finished.

Notes:

- If the nozzle is dry, please push out the brush in the base to clean the nozzle.
- If the nozzle is particularly dry, please pour a little water on the table, remove the cartridge, and wash the nozzle in water for about 1 minute.

APP OPERATION

- Click "New" to create a new file.
- Click "Add image" or "Add text" to add content.
- Click on image or text to move, rotate and zoom. (Click the search list again to reset the content.)
- After the content is added, click "Print Preview" to enter the crop mode.
- Click the default crop box shown in the edit area, and adjust the crop box to the desired pattern area.
- Click "Print" to send the pattern to the printer.

BUTTON OPERATION AND STATUS INDICATION

- 5 seconds after power on, it enters the ready state. Indicated by one beep, and the white lights in the middle and on both sides are on.
- In the ready state, click the button to enter the print state. The white lights on both sides turn green. Holding the printer to complete the printing. The continuous prompt tone will be sounded if the printing is not finished. It will automatically return to the ready state when the printing is completed.
- In the ready state, press and hold the button to enter the cleaning state. The white lights on both sides turn to green. Keep the printer still, wait for a while and it will automatically return to the ready state.
- In the print state, click the button to return to the ready state. If it is in the middle of multiple-line printing, the nozzle will be printed when you re-press the button again (return to first line of print and hold the button instead).
- Press and hold the button, then turn on the power switch to enter the programming mode.
- After turning on the power switch, press and hold the button within 5 seconds until the white lights on both sides flash, which will restore the factory settings.
- When the battery is low, the middle white light flashes.
- The charging indicator is next to the USB port (Type-C). Charging "Yellow" / Fully Charged "Green".

ADVANCED OPERATION

Multiple-Line Printing

In the crop mode, you can add multiple crop boxes for multiple-line print. (Click the bar for each line printing.) When you are done with the pattern editing and cropping, press the button for the first line printing. After the process to the next line and press the button again for second-line printing. Follow the same manner to finish the multi-line.

Multiple-Line Alignment

When you are done with the first line cropping, you can use the "Duplicate down" option to duplicate the first box, making sure the multiple-line printing is aligned.

Ultra-wide Pattern Printing

For ultra-wide pattern printing, errors may happen and the correction process is longer than the regular pattern printing. You can set the very fine crop box on the left and set the "Duplicate right" option to duplicate the fine box.

Software Offline Operation

- Go to the app setting page (check the sidebar on the home page).
- Click the "Offline" option and search it.
- Click the HTTP link at the bottom of the app setting page.
- Use browser open "Offline" function. Save page to desktop/home page.

Notes:

- Software features need to be used offline first before they can be used online.



Installed Certificate in iOS

- Click the certificate link on the APP Settings page to download the certificate.
- Go to Settings -> General -> About -> Certificate Trust Settings.
- Go to Settings -> General -> About -> Certificate Trust Settings. Select "Trust" for trust certificate. Turn on trust for the downloaded certificate.

Installed Certificate in Android

- Click the certificate link on the APP Settings page to download the certificate.
- Go to Settings -> Lock screen & security -> Install from device memory (SD card) -> Select the certificate.

1 Start/Stop Button
 2 Status Indicator

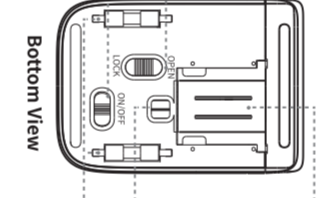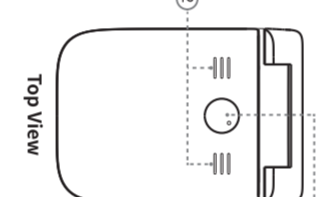

3 Print Head Nozzle
 4 Optical Sensor
 5 Power Lock Toggle
 7 ON/OFF Toggle